



Visit us and save www.multisystem-electronics.com

Save 5% on your next purchase Enter Coupon Code – 5%

Save on World-Wide Dispatch Enter Code – FREE SHIPPING

Sony OPPO Panasonic Samsung LG Yamaha Blu-Ray & DVD Disc Players

– Blu-Ray Zones A/B/C

– DVD Regions 1 + 2 + 3 + 4 + 5 + 6

– 100~240V 50/60Hz Automatic

DVD Regions are set to automatic, switching of the blu ray zones is done with the original remote control

- * TURN THE PLAYER **ON** / WAIT FOR THE HOME SCREEN
- * For **Zone A** – Press button **1** on the remote control
- * For **Zone B** – Press button **2** on the remote control
- * For **Zone C** – Press button **3** on the remote control
- * INSERT YOUR DISC AND PRESS PLAY



QUICK START – Please make sure that the Quick Start option is OFF (default is OFF) under settings – system – find quick start – select off – press ok to execute.

For Panasonic Players: leave the **Remote IR1 setting** – Default is IR1.

For Samsung Players: **REGION ERROR** – If you get the region code error press the **HOME** button, then **STOP, STOP, (region)** then **PLAY** button.